

***Strata***<sup>®</sup> ***DK***

Digital Business Telephone Systems

**Digital Single Line Telephone  
User Guide**

---

## Publication Information

Toshiba America Information Systems, Inc., Telecommunication Systems Division, reserves the right, without prior notice, to revise this information publication for any reason, including, but not limited to, utilization of new advances in the state of technical arts or to simply change the design of this document.

Further, Toshiba America Information Systems, Inc., Telecommunication Systems Division, also reserves the right, without prior notice, to make such changes in equipment design or components as engineering or manufacturing methods may warrant.

DKA-UG-DKSLT-VB  
4016166

Version B.1, May 2000 (DK424i and DK40i R4.3)  
Version B, May 1999  
Version A, September 1996

---

## © Copyright 2000

### **Toshiba America Information Systems, Inc. Telecommunication Systems Division**

All rights reserved. No part of this manual, covered by the copyrights hereon, may be reproduced in any form or by any means—graphic, electronic, or mechanical, including recording, taping, photocopying, or information retrieval systems—without express written permission of the publisher of this material.

Strata is a registered trademark of Toshiba Corporation.

Stratagy is a registered trademark of Toshiba America Information Systems, Inc.

Trademarks, registered trademarks, and service marks are the property of their respective owners.

---

# Contents

---

## Introduction

Organization .....	v
Conventions .....	vi

## Chapter 1 – The Grand Tour

Buttons .....	2
LED Indicators .....	3
Volume Controls .....	4
On-hook/Off-hook .....	4

## Chapter 2 – Features

Before You Begin .....	5
Automatic Line Selection .....	5
Ringing Line Preference .....	5
Incoming Call Ringing Patterns .....	6
Feature Codes .....	6
Quick Reference .....	7
Making an Internal Call .....	7
Making an Outside Call .....	7
Making an Outside Call Using ISDN .....	8
Answering Calls .....	8
Account Code Calls .....	9
Forced Account Codes .....	9
Emergency Override of Forced Account Code Dialing Requirements .....	9

## Contents

### Chapter 2 - Features

Verified Account Codes .....	10
Voluntary Account Codes .....	10
Automatic Busy Redial (ABR) .....	11
Automatic Call Distribution (ACD) .....	12
Automatic Callback (ACB) .....	13
Attendant Console Calling .....	14
Background Music (BGM) Over Telephone Speakers .....	15
Call Forward (CF) .....	15
Call Forward—External .....	17
Call Park Orbits .....	20
Call Pickup .....	22
Pick up Calls to a Group .....	23
Conference Calls .....	24
CO Line Queuing .....	26
Direct Inward System Access (DISA) .....	27
Door Phones .....	30
DTMF Tone Dialing with * and # .....	31
Hold .....	31
Retrieve a Call on Hold .....	32
Retrieve a Call on Exclusive Hold .....	32
Message Waiting .....	32
Set Message Waiting on Other Telephones .....	34
Override Calls .....	35
Busy Override or Off-hook Call Announce .....	35
Do Not Disturb (DND) Override .....	35
Executive Override .....	35
Toll Restriction Override .....	36
Paging Announcements .....	36
Repeat Last Number Dialed .....	37
Speed Dial .....	38
Timed Reminders .....	39

**Chapter 3 – Toshiba Voice Mail Systems**

Setting Call Forward .....41  
    Voice Mail Identification Code .....41  
    Call Forward To Toshiba Voice Systems .....43  
Voice Mail Message Retrieval .....43

**Appendix A – Access Codes**

CO Line Access Codes .....45  
Paging Access Codes .....47  
Speed Dial Access Codes .....48

**Appendix B – Centrex Application**

Flexible Directory Numbering .....49  
Centrex Feature Buttons .....49  
Ringing Repeat .....50  
Delayed Ringing .....50

**Index** .....51

## **Contents**

*Chapter 3 - Toshiba Voice Mail Systems*

# Introduction

---

This guide provides instructions for operating the DKT2001 Digital Single Line Telephone (SLT) for Strata DK Systems. These systems include:

- ✦ DK14
- ✦ DK16e and DK16
- ✦ DK40i and DK40
- ✦ DK424i, DK424, and DK280 (Release 3.0 or higher)

## Organization

This guide is divided as follows:

- ✦ **Chapter 1 – The Grand Tour** describes the buttons, LEDs and volume controls of the DKT2001 telephone.
- ✦ **Chapter 2 – Feature Operation** provides descriptions and operating procedures for all of the features available with DKT2001 telephones. A quick reference is also included.
- ✦ **Chapter 3 – Toshiba Voice Mail Integration** explains how to set up your telephone to forward calls to a Toshiba Voice Processing System and to retrieve recorded messages left by callers.

- ♦ **Appendix A – Access Codes** provides CO Line Access Codes, Paging Group Codes, Feature Access Codes, and Speed Dial Access Codes.
- ♦ **Appendix B – Centrex Application** describes the Centrex features which may be available with your Strata DK system.

## Conventions

Some of the following conventions are omitted in our manuals when they are not used.

Conventions	Description
<b>Note</b>	Elaborates specific items or references other information. Within some tables, general notes apply to the entire table and numbered notes apply to specific items.
<b>Important!</b>	<i>Calls attention to important instructions or information.</i>
<b>CAUTION!</b>	<b>Advises you that hardware, software applications, or data could be damaged if the instructions are not followed closely.</b>
<b>WARNING!</b>	<b>Alerts you when the given task could cause personal injury or death.</b>
P	Represents any Directory Number button, also known as an extension or intercom number.
[PDN]	Represents any Primary Directory Number button (the extension number for the telephone).
[SDN]	Represents any Secondary appearance of a PDN. A PDN that appears on another telephone is considered an SDN.
[PhDN]	Represents any Phantom Directory Number button (an additional DN).
<b>Arial Bold</b>	Represents telephone buttons.
<b>Courier</b>	Shows a computer keyboard entry or screen display.



Conventions	Description
<b>Plus (+)</b>	Shows a multiple PC keyboard or phone button entry. Entries without spaces between them show a simultaneous entry. Example: <b>Esc+Enter</b> . Entries with spaces between them show a sequential entry. Example: <b># + 5</b> .
<b>Tilde (~)</b>	Means “through.” Example: 350 ~ 640 Hz frequency range.
➤	Denotes the step in a one-step procedure.
➤	Denotes a procedure.
<a href="#">See Figure 10</a>	Grey words within the printed text denote cross-references. In the electronic version of this document (Strata DK Library CD-ROM or FYI Internet download), cross-references appear in blue hypertext.

## Action/Response Table

1. <i>Actions</i> you perform appear in this column. They can consist of either a single step or a series of numbered steps.	The <i>immediate response to the action</i> performed appears in this column. Additional notes and comments are also included.
--	--

## Related Documents and Media

**Note** Some documents listed here may appear in different versions on the CD-ROM, FYI, or in print. To find the most current version, check the version/date in the Publication Information on the back of the document's title page.

The following documents and CD-ROMS can be used to reference further information about the Strata DK systems.

- ♦ Strata DK Programming Manual
- ♦ Strata DK Installation & Maintenance Manual
- ♦ Strata DK Library CD-ROM

For authorized users, Internet site FYI (<http://fyi.tsd.toshiba.com>) contains all current Strata DK documentation and enables you to view, print, and download current publications.

# The Grand Tour

---

# 1


This chapter familiarizes you with the controls and indicators located on your Strata DKT2001 Digital SLT.

Toshiba digital telephones incorporate state-of-the-art telecommunications technology and provide a vast array of calling features. They are easy to operate and all features are accessed with a feature button or a brief access code.

# Buttons

Strata DKT2001 telephones come with six fixed buttons (see [Figure 1](#)). The functions of each of the buttons are described in [Table 1](#).

Two of the buttons (**Line** and **Msg**) have LEDs which indicate various line or call states. See [Table 2](#) for descriptions of the Line LED indicators.

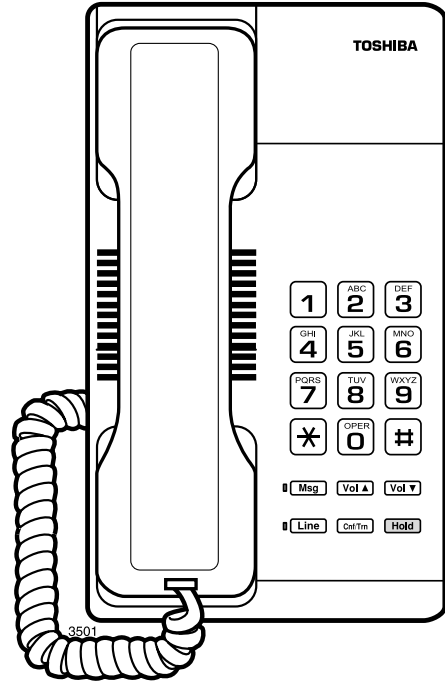

**Figure 1** Digital Single Line Telephone (DKT2001)

**Table 1** Fixed Button Definitions

Button	Definitions
<b>Line</b>	Used to answer and place calls. This button is your [PDN]. It is not a CO line button. Also used to program Voice Mail ID codes and Call Forwarding.
<b>Cnf/Trn</b>	Used for conference and transfer calls (see <a href="#">“Call Park Orbits” on Page 20</a> and <a href="#">“Conference Calls” on Page 24</a> ).
<b>Hold</b>	Used to hold internal or outside calls. Also used for Exclusive hold. See <a href="#">“Hold” on Page 31</a> .
<b>Msg</b>	The message button is used to call back the station or voice mail device that activated the LED (see <a href="#">“Message Waiting” on Page 32</a> ).
<b>Vol▲ Vol▼</b>	Adjusts volume levels ( <a href="#">“Volume Controls” on Page 4</a> ).

# LED Indicators

The **Line** button has an LED that flashes at varying rates to indicate line or call status (see [Table 2](#)). The **Msg** button's LED indicates a message is waiting.

**Table 2** LED Indicators

Use	Your Station	Other Station
	Interval Rates	
Line In Use (access outside line)	2 seconds on, 1/8 second off— 1/8 second ON/OFF	steady
Incoming Call (while ringing)	1 second on at 10 pulses/second—1 second OFF	one second ON/ OFF
Hold (outside line)	4 pulses/second for 1/8 second ON/ OFF	1/2 second ON/OFF
Hold – Consultation (during consultation/transfer to another station)	10 pulses/second	steady
Hold – Exclusive (outside line)	10 pulses/second	steady
Hold – Recall (when held call recalls your idle station)	1 second at 2 pulses/second, 1 second at 10 pulses/second	flashes
Hold – Exclusive Recall	1 second at 2 pulses/second, 1 second at 10 pulses/second	steady
Internal Call (while station ringing)	The Line LED flashes 10 pulses/ second—1 second OFF	Red flashing or ringing
Conference	10 pulses/second	steady

## Volume Controls

Your telephone has **Vol ▲/Vol ▼** buttons to increase and decrease ring tone and handset volume levels.

You must hold down either button for at least 1/8 second for any volume change to occur. If you continually hold down either button, the volume continually changes about every half second until the level limit is reached. You hear ring tone as long as you press a Volume button when your telephone is idle.

The method for changing feature volume varies. Some features can be adjusted using only the **Vol ▲/Vol ▼** and others require additional buttons (see [Table 3](#)).

**Table 3** Using only Vol ▲/Vol ▼

Feature	Phone Status	Comments
Ring Tone Volume	On-hook, Idle	Use to adjust the volume of your incoming calls.
Handset Receiver	Off-hook	After a call is terminated and the handset is on-hook, the volume level returns to the “original” level for the next call. This “original” level can be adjusted to higher/lower in system programming.

## On-hook/Off-hook

Some procedures in this user guide instruct you to perform a step while “on-hook” or “off-hook.” These terms refer to the position of the handset. “Off-hook” indicates that the handset should be lifted off of the telephone cradle. “On-hook” indicates that the handset should remain in the cradle and should not be lifted.

This chapter explains how to use the features on your DKT2001 telephone. There is a Quick Reference section for basic telephone use, followed by the features in alphabetical order.

## Before You Begin

If you are a new user of the Strata DKT2001 telephone, you need to find out if your telephone has been set up for Automatic Line Selection and Ringing Line Preference.

### Automatic Line Selection

You *have* Automatic Line Selection, if you hear dial tone and the Line LED lights steady.

➤ Lift the handset.

You do *not* have Automatic Line Selection, if you hear silence.

➤ Lift the handset and press **Line** before dialing.

## Features

### Before You Begin

## Ringing Line Preference

You *have* Ringing Line Preference, if you can answer a line ringing your station by lifting the handset. You do *not* have Ringing Line Preference, if you have to press **Line** to answer the ringing call. Ringing Line Preference is enabled in system programming.

## Incoming Call Ringing Patterns

Your telephone ringing pattern is set in system programming.

Some systems may use the internal call ring pattern—one second ON, three seconds OFF—for incoming outside calls.

A distinct outside call ring pattern—0.4 seconds ON, 0.2 seconds OFF, 0.4 seconds ON, three seconds OFF—is available.

## Feature Codes

Your telephone may not have all of the features mentioned in this guide. The Appendix lists all of the feature codes that can be programmed for your telephone system. See your System Administrator to find out which features and codes apply to your telephone.

Some CO line features, such as conferencing, Centrex, or behind PBX operation require “flashing the CO line,” to dial Centrex/PBX feature access code or extension numbers.

### ► To flash a CO line

- |  |                                    |
|--|------------------------------------|
| <ol style="list-style-type: none"><li>1. Access a CO line.</li><li>2. Press <b>Cnf/Trn</b> + <b>#45</b>.</li><li>3. You can now dial a Centrex or PBX feature access code or extension number.</li></ol> | You hear Centrex or PBX dial tone. |
|--|------------------------------------|



# Quick Reference

## Making an Internal Call

- 
- |   |                              |
|---|------------------------------|
| <ol style="list-style-type: none"><li>1. Lift the handset<br/>...or lift the handset<br/>and press <b>Line</b>.</li><li>2. Dial the desired<br/>station number.</li></ol> | You hear internal dial tone. |
|---|------------------------------|

## Making an Outside Call

- 
- |  |  |
|--|--|
| <ol style="list-style-type: none"><li>1. Lift the handset<br/>...or lift the handset<br/>and press <b>Line</b>.</li><li>2. Enter a CO line<br/>number access code.</li><li>3. Dial the desired<br/>telephone number.</li></ol> | You hear internal dial tone.<br><br>See <a href="#">Table 4 on Page 46</a> .<br>You hear dial tone after entering the access code. |
|--|--|

## Making an Outside Call Using ISDN

If your Strata DK telephone system has Integrated Services Digital Networking (ISDN) features, you can make calls using this advanced service. See your System Administrator regarding your system's capabilities.

---

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear internal dial tone.
2. Enter a CO line number access code.	See <a href="#">Table 4 on Page 46</a> . You hear dial tone after entering the access code.
3. Enter the desired telephone number.	Your call rings through to the destination.
4. If you need to dial a subaddress (usually required for calling station equipment at a location requiring extra dialed digits), then, proceed to Step <a href="#">5</a> .	
5. Wait for the system to connect you.	The default waiting period is four seconds; however, your system may be set differently.

## Answering Calls

---

➤ When your telephone rings, lift the handset and speak  ...or lift the handset and press <b>Line</b> .	The internal ring pattern is one second ON, three seconds OFF—for incoming outside calls.  You are connected to the calling party. The Line LED remains ON.
--	---

# Account Code Calls

Account Codes are used for a variety of reasons, including billing, call tracking, and line restriction applications. The system records the Account Codes and can print the codes and other call details on a Station Message Detail Recording (SMDR) report.

## Forced Account Codes

Some applications may require that you enter an Account Code, called a Forced Account Code, before dialing a telephone number. Forced Account Codes can be recorded for outgoing calls only.

<ol style="list-style-type: none"> <li>1. Lift the handset ...or lift the handset and press <b>Line</b>.</li> <li>2. Dial a CO line number access code.</li> <li>3. Enter the Forced Account Code.</li> <li>4. Dial the telephone number.</li> </ol>	<p>You hear dial tone.</p> <p>See <a href="#">Table 4 on Page 46</a>. The CO line accessed must be set to require a Forced Account Code in system programming.</p> <p>You hear dial tone after you press the last digit of a valid account code or busy tone after you press the last digit of an invalid code (if your system verifies account codes.)</p>
--	---

## Emergency Override of Forced Account Code Dialing Requirements

Forced Account Code requirements can be bypassed by up to three emergency numbers, including 911. See your system administrator for these numbers:

- 1)     911          2)                           3)

## Verified Account Codes

Some Strata DK systems verify the numbers entered when you enter Forced or Voluntary Account Codes. These are called Verified Account Codes.

## Voluntary Account Codes

Voluntary Account Codes are optional and can be entered anytime after accessing a CO line or during a call.

An exception is a Voluntary Account Code which is required to change the Toll Restriction classification of your station. The code gives you access to telephone numbers outside your usual dialing area and must be entered prior to dialing the telephone number. As an example, if your station is restricted to local area calls, you can make out-of-state calls by using a Voluntary Account Code set in system programming.

If the system is set for Verified Account Codes, you must enter specific codes when entering the Voluntary Account Code(s) or the code is not validated for the SMDR call report.

### ► To record a voluntary account code

1. After accessing a CO line or talking on a line, press <b>Cnf/Trn</b> .	You hear dial tone and the CO line is on Hold.
2. Dial <b>#46</b> .	
3. Enter the Voluntary Account Code.	Voluntary Account Codes must be entered during the call. Dial tone stops after the first telephone number digit is dialed.
4. Dial a telephone number if you entered the code after accessing the CO line ...or resume talking or hang up if you entered the code after the call.	

## Automatic Busy Redial (ABR)

After reaching a busy outside number, you can activate ABR so that the Strata DK system automatically redials the number at regular intervals. If the system redials an outside number that is still busy, ABR resets and tries again. This feature may not be enabled on some (or all) lines in your system—depending on the telephone line type connected. It also may not be enabled for your station.

ABR is not attempted while your station is busy, but continues to time-out.

1. When you reach a busy number, press <b>Cnf/Trn + #44</b> .	You hear confirmation tone.
2. Hang up.	
3. The system redials, up to 15 times, every 30 or 60 seconds (depending on system programming).	
4. Your telephone receives ring tone, when ABR dials the number and it is available.	The Line LED flashes.
5. Lift the handset and wait for the party to answer.	If you do not pick up the handset within 30 seconds after a connection is made, you hear a muted ring for another 30 seconds, then the call disconnects.

### ► To cancel ABR

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear internal dial tone.
2. When you reach a busy number, press <b>#44</b> .	You hear confirmation tone.

## Features

### Automatic Call Distribution (ACD)

# Automatic Call Distribution (ACD)

Your DKT2001 telephone must be programmed for ACD in order for ACD features to work. If you are an ACD agent or supervisor, please refer to the *Strata DK ACD Agent* and *ACD Supervisor's Guide(s)* for detailed feature instruction.

#### ► To receive ACD calls

► Lift the handset ...or lift the handset and press <b>Line</b> .	You are connected to your ACD call.
---	-------------------------------------

#### ► To access other ACD features

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear internal dial tone.
2. Enter the appropriate access code sequence: <b>#4036</b>	ACD Call Pickup
<b>Cnf/Trn + #4033</b>	ACD Help
<b>#4031 + XXXX</b>	Log In/Out (XXXX = Agent ID code)
<b>Cnf/Trn + 406YY</b>	Transfer to ACD Group (YY = ACD Group 01~16 on large systems, 01~08 on small systems)
<b>#4032</b>	Unavailable
<b>Cnf/Trn + #4038</b>	Work Unit
	<b>Note</b> If you receive a fast busy, verify your Agent ID number or see your System Administrator.

## Automatic Callback (ACB)

After reaching a busy or the Do Not Disturb (DND) mode, you can set ACB to have the system call you back when the called station is no longer busy or in the DND mode. ACB does not apply to outside calls.

1. After reaching a busy station, press <b>4</b> .	You hear busy tone, followed by dial tone (two secs.), then busy tone.
2. Hang up.	You can make other calls while waiting for the called station to become available.
3. <b>Line</b> rings at a fast rate when the called station becomes idle.	
4. Answer within three rings to prevent the callback from being cancelled.	You hear a single tone, as if making a regular internal call. If you used Tone Signaling instead of Voice First Signaling, you hear repetitive ringing.  If you hear busy tone after answering, it means the called party has already received or originated another call. Your request is not cancelled. You will be called again when the station becomes idle.
5. If you were attempting to make an outside call and did not use LCR, redial the telephone number.	If the original call was made using LCR, the telephone number is automatically dialed.

### ► To cancel ACB (to busy or DND station)

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear internal dial tone.
2. Press <b>#43</b> .	
3. Hang up.	

# Attendant Console Calling

Up to four attendant consoles can be installed per system. There can be up to three ways to call the attendant console, depending upon system programming.

## ► To call any attendant console

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear internal dial tone.
2. Press <b>0</b> .	The call rings the Attendant Console's <b>0</b> button. These calls rotate between the consoles if more than one console is installed.

## ► To call a particular console

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear internal dial tone.
2. Enter the console's Directory Number [DN] ____.	The call rings the console's [PDN] button. Your System Administrator can provide the Attendant Console(s) internal number(s).

## ► To make an emergency call to a console

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear internal dial tone.
2. Press <b>#400</b> .	The In-EMGR LED flashes on all consoles.



# Background Music (BGM) Over Telephone Speakers

BGM over external speakers is controlled by the System Administrator. If BGM is enabled, you can turn it ON/OFF for your individual station speaker.

## ► To enable/cancel BGM on your telephone speaker

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear internal dial tone.
2. Press <b>#481</b> (ON) ...or <b>#480</b> (OFF).	Confirmation tone is heard. BGM stops playing if the telephone rings or is paged.

## Call Forward (CF)

You can set your station to CF to another station or voice mail for a variety of conditions, described in Step 2.

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear internal dial tone.
2. Enter a CF access code:  <b>#601</b> -All Calls  <b>#602</b> -Busy  <b>#603</b> -No Answer	You hear confirmation tone.  Forwards all calls immediately; your telephone does not ring.  Forwards calls immediately when your telephone is busy or in DND mode.  Forwards calls to another station if you do not answer within a certain time (that you designate). Not available from a rotary telephone.

## Features

### Call Forward (CF)

#### **#604**-Busy/No Answer

3. Enter the Call Forward destination number.
4. If setting CF-No Answer or CF-Busy/No Answer, press \*, enter the time in seconds, then press #.
5. Hang up.

Forwards calls immediately to another station whenever you are busy on another call. Calls also forward if you do not answer within a certain time (that you designate). Not available from a rotary telephone.

Confirmation tone is heard.

You can enter the amount of time that your telephone rings before it forwards (08~60 seconds). Always enter two digits. If you do not wish to change the ring time, press \* then # to make the ring time the same as the last setting.

If you are unable to dial DTMF tones by pressing \* and #, see your System Administrator.

You hear a confirmation tone after pressing \* and again after pressing #.

#### Notes

- You can continue using your phone in the usual manner while Call Forward is in effect.
- If Call Forward is set:
  - CO lines that ring your station exclusively will forward—CO lines that ring more than one station will not forward. (Release 3.2 or higher will allow more than one station to ring and follow the call forwarding.)
  - CO line calls transferred to your station will forward.
  - Internal calls will forward.
  - Call Forward has priority over the hunt feature set in system programming.

### ► To cancel Call Forward

- |   |                                   |
|---|-----------------------------------|
| <ol style="list-style-type: none"> <li>1. Lift the handset<br/>...or lift the handset<br/>and press <b>Line</b>.</li> </ol> | You hear internal dial tone.      |
| <ol style="list-style-type: none"> <li>2. Press <b>#601</b>.</li> </ol>   |                                   |
| <ol style="list-style-type: none"> <li>3. Hang up.</li> </ol>   | You hear confirmation tone again. |

## Call Forward—External

This feature enables you to forward new, incoming calls to a number outside of the system.

Call Forward-External does not forward internal calls or calls transferred to your telephone. The only calls that it forwards are incoming Direct-In-Dial (DID) calls and calls over CO lines dedicated to ring your station.

However, any of the other Call Forward modes can be set simultaneously with Call Forward-External. Other Call Forward modes will be active for internal and transferred calls.

- |   |  |
|---|--|
| <ol style="list-style-type: none"> <li>1. Store the number that calls will be forwarded to at Station Speed Dial location 49 (RCTUA, B, C/D, B1CAU, B2CAU/B2CBU, B3CAU/B3CBU processors), or location 139 (RCTUE/F, B5CAU/B5CBU processors).</li> </ol> | <p><b>Important!</b> <i>Only perform Step 1 the first time Call Forward-External is set or when you change the destination. It is not necessary to store the destination each time; it remains in system memory.</i></p> <p>The Call Forward destination can be a telephone number over a CO line, a station over a Tie line, or a station within your Strata DK system.</p> <p>Follow the procedures for <a href="#">“Speed Dial” on Page 38</a> to store the destination number.</p> |
|---|--|

## Features

### Call Forward (CF)

2. Lift the handset  
...or lift the handset  
and press **Line**.
3. Press **#670**.
4. Hang up.

Use the Speed Dial storage codes detailed on See [Page 48](#). When forwarding to an outside destination include the CO Line (or CO Line group) access code before the telephone number.

Example: 8015833700, where  
801 = CO Line access code  
5833700 = Telephone number

**Important!** See [Table 4 on Page 46](#) for CO Line/Line Group access codes. The LCR access code “9” cannot be used.

Incoming calls will forward to the destination stored at Station Speed Dial Location 49.

#### ► To cancel Call Forward-External

1. Lift the handset  
...or lift the handset  
and press **Line**.
2. Press **#670**.

#### Remote Call Forward—External Destination Change

If Call Forward-External mode is set at your station, you can change the forwarding destination from a telephone outside of the system.

The destination is normally an external Public Telephone Network Number, but it can also be an internal Directory Number.

► **To change the destination number**

1. Call into the Strata DK system over a CO line programmed for the DISA feature.

You hear ring back tone signal, then internal dial tone for 10 seconds. Try again if you hear busy tone.

**Note** See the System Administrator for DISA telephone numbers.

2. After you hear dial tone, press **#670**, then enter a [PDN].

You hear a confirmation tone.

If a number is not dialed, the system automatically causes the DISA CO line to ring at telephones as a normal incoming call. Then, if the call is not answered within 15 seconds after the ringing starts, it disconnects.

3. Enter the Remote Call Forward-External security code.

You hear a confirmation tone. See the System Administrator for the access code.

4. Enter the new destination number.

You can enter an internal [PDN], or a CO or Tie line access code + an external telephone number.

With some systems, you can dial a line group code instead of a CO line number access code (see [Table 4 on Page 46](#)).

You cannot enter the LCR access code **9**.

## Features

### Call Park Orbits

**Important!** *Do not press #, since that ends the procedure (see Step 5). Instead, use **44** when entering a CO line access code.*

5. Press **#**.

You hear a confirmation tone.

## Call Park Orbits

The Call Park feature enables you to hold a call temporarily in an orbit (the area where the call is held). Anyone can retrieve the call from the orbit using the same or a different station. There are 20 General Park Orbits for the system and 1 Personal Park Orbit for each station.

Once you have parked a call in an orbit, you can:

- ♦ Hang up and retrieve the parked call at a later time
- ♦ Originate another call
- ♦ Access a voice paging device to announce the parked call for pickup from another station

### ► To park a call

1. While on a call, press **Cnf/Trn**.
2. Press **#332**.
3. Enter a General Orbit Number (**900~919**) or [PDN].

You hear dial tone.

You hear a one second confirmation tone. The call is parked at the orbit or to an assigned [PDN]. If an orbit number is busy, repeat Steps 1~3 with another orbit number.

4. Hang up.

Once the call is parked, you can make or receive other calls.

**Notes**

- If the parked call is not retrieved within a specified time, the call rings back to your phone.
- If your phone is busy when the parked call recalls, you hear two tones of two short beeps, three seconds apart. You can place the new call on hold and answer the parked recall or end the second call and answer the parked recall by hanging up. The parked call remains camped onto your phone until you respond.

➤ **To retrieve a parked call from any station**

<ol style="list-style-type: none"> <li>1. Lift the handset ...or lift the handset and press <b>Line</b>.</li> </ol>	You hear dial tone.
<ol style="list-style-type: none"> <li>2. Press <b>#332</b> and enter the Orbit Number that you used to park the call.</li> </ol>	You are reconnected to the parked call.

➤ **To park a call and page another station**

<ol style="list-style-type: none"> <li>1. While on a call, press <b>Conf/Trn + #331</b>.</li> <li>2. Enter the General Orbit Number (<b>900~919</b>) or [PDN].</li> </ol>	The original call is now parked in the specified Orbit Number or [PDN]. After you enter an Orbit Number, a short burst of dial tone prompts you to enter the Page access code.
---	--

## Features

### Call Pickup

3. Enter a Page Group or Zone access code (see [Tables 5 and 6](#) on Page 47).
4. Make your announcement and include the Orbit Number.
5. Hang up to free the paging device.

If the parked call is not retrieved within a specified time, the call rings back to your phone.

## Call Pickup

You can pick up a call that is ringing another station, a call placed on hold at another station, and other types of calls with the Call Pickup feature.

1. Lift the handset  
...or lift the handset and press **Line**.
2. Press **#5**.
3. Press a Call Pickup code:  
**#2 + XXX**  
(XXX=[PDN]/[PhDN])  
**#30**  
**#35 ~ #38**  
**9**  
**#7001~#7200**

This begins the call pickup sequence.

You are connected to the caller.

Pick up a call ringing or on hold at a specific Primary or Phantom Directory Number [PDN] or [PhDN] (Release 3.1 and above).

Pick up a telephone group page, internal call, or door phone call ringing a station.

Pick up an external page.

Pick up a ringing CO line.

Pick up a CO line on hold (Lines 1~200).



## Pick up Calls to a Group

Stations may be assigned in system programming to Pickup Groups. As many as 20 groups can be created to enable you to easily pick up incoming (new or transferred) or internal calls that are ringing stations in your group or in other groups. You can belong to more than one group. See the System Administrator for group assignments.

### ► To pick up a call that is ringing in your pickup group(s)

1. Lift the handset  
...or lift the handset  
and press **Line**.

2. Press **#5#34**.

You are connected to the caller.

### ► To pick up a call that is ringing in another group

1. Lift the handset  
...or lift the handset  
and press **Line**.

2. Enter **#5** + the group  
pickup access code  
(**#320~#339**).

You hear dial tone.

You are connected to the call after dialing the group access code. If the called station belongs to more than one group, any of the Group Pickup codes associated with those groups will pick up the call.

**Note** These group pickup access codes can be entered into a speed dial location for easier access.

# Conference Calls

Strata DK enables you to participate in a variety of conference calls:

- ♦ Up to four stations (including your own) may be conferenced on internal lines.
- ♦ Up to three stations (including your own) may be conferenced with one CO line.
- ♦ Up to two stations (including your own) may be conferenced with two CO lines.

## Step 1: Make a Conference Call or Tandem Two CO Lines

- |  |  |
|--|--|
| <ol style="list-style-type: none"><li>1. While on either an external call or internal call, press <b>Cnf/Trn</b>.</li><li>2. If you want to add an outside line, dial the CO line access code.</li><li>3. Dial the telephone number that you want to add to the call<br/>...or dial the internal station number.</li><li>4. If you hear a single tone, voice announce the call and ask the party to pick up<br/>...or, if you hear ringing, announce the call once the party answers</li></ol> | <p>You hear internal dial tone and the call is placed on hold. You will not hear the held party again until Step 4.</p> <p>See <a href="#">Table 4 on Page 46</a> for CO line access codes.</p> <p>You hear dial tone when the line is accessed. (Up to two CO lines can be conferenced.)</p> <p>On internal calls, the new party must pick up the handset or press a [PDN] to participate in a conference call.</p> |
|--|--|

...or, if the called station is busy, you can press the **Line** button to return to the existing call.

5. If you are ringing an internal party, press **Conf/Trn** after the party answers

...or if you are ringing an outside line, you can press **Conf/Trn** before or after the party answers.

6. If only your telephone is connected with two parties on external CO lines, you can exit the conference by pressing **Conf/Trn** again before you hang up.

**Note** If a called external number is busy, you must hang up and re-initiate the call.

All parties are conferenced.

If you exit the conference call, your Line LED continues to flash. Your station appears busy to other callers. The external lines remain connected.

## Step 2: (Optional) Add More Callers to a Conference or Tandem Call

- For Conference calls: repeat Substeps 1~3 of Step 1: [“Make a Conference Call or Tandem Two CO Lines”](#) to add another party to the conference.

If one of the stations hangs up on a two-station/two CO line conference call, the remaining station maintains the conference.

## Features

### CO Line Queuing

...or for Tandem calls:  
press **Cnf/Trn** and  
hang up.

If only your telephone is connected with two parties on external CO lines, you can exit the call to allow the two external parties to continue talking.

If you exit the conference call, the Line LED continues to flash. Your station appears busy to other callers.

## CO Line Queuing

If all outgoing CO lines are busy, the CO Line Queuing feature will ring your telephone when one is available.

- 
- |   |   |
|---|---|
| <ol style="list-style-type: none"><li>1. If you hear busy tone after dialing a CO line access code, press <b>4</b>.</li><li>2. Hang up. (You can make other calls while waiting for a line to become available.)</li><li>3. Your telephone rings at a fast rate when a CO line becomes idle.</li><li>4. Answer within three rings to prevent the callback from being cancelled.</li><li>5. Dial the desired telephone number.</li></ol> | <p>Busy tone stops, followed by dial tone (two secs.), then busy tone resumes.</p> <p>You hear CO dial tone. (If you hear busy tone, it means the line has already been seized or has received an incoming call. Your request is not cancelled. You will be called again the next time a line becomes idle.)</p> <p>If the original call was made using LCR (dial <b>9</b>), the system automatically dials the number.</p> |
|---|---|

► **To cancel CO Line Queuing**

- 
- Lift the handset and press **#43**  
...or press **Line + #43**.

Confirmation tone is heard.

## Direct Inward System Access (DISA)

Outside callers with telephones that send Dual-tone Multi-frequency (DTMF) tones (push-button dialing) can call in on CO lines programmed for DISA and dial stations or outgoing CO lines without going through an attendant or operator.

- 
1. From outside the system, call the DISA CO line phone number: \_\_\_\_-\_\_\_\_\_.  
See the System Administrator for this number.
  2. Listen for the repetitive ringback tone signal, followed by dial tone.  
Try again if you hear busy tone.

## Features

### Direct Inward System Access (DISA)

- |  |  |
|--|--|
| <ol style="list-style-type: none"><li>3. During the 10 secs. of dial tone, make your call.</li></ol> | <p>If a number is not dialed, the system automatically causes the DISA CO line to ring at telephones as a normal incoming call. Then, if the call is not answered within 15 seconds after the ringing starts it disconnects.</p> <p>To call another station after completing a DISA station call, the internal party must transfer you. Station Paging and System Paging cannot be made on DISA calls.</p> |
| <ol style="list-style-type: none"><li>4. If you hear busy tone, press *.</li></ol>                   | <p>If the call is not answered after 6 rings or 24 seconds, whichever occurs first, you hear busy tone.</p>  |
| <ol style="list-style-type: none"><li>5. When you hear dial tone, call again.</li></ol>              |  |

#### ► To make an outgoing call with DISA

---

- |  |  |
|--|--|
| <ol style="list-style-type: none"><li>1. From outside the system, call the DISA CO line telephone number: ___ - _____.<br/><br/>See the System Administrator for this number.</li><li>2. Listen for repetitive ringback tone, then listen for dial tone.<br/><br/>Try again if you hear busy tone.</li><li>3. Dial a CO line number or line group access code. See <a href="#">Table 4 on Page 46</a>.</li></ol> | <p>The dial tone is present for 10 seconds to allow direct dialing of a station internal number or CO line access code. If a number is not dialed, the system automatically causes the DISA CO line to ring at telephones as a normal incoming call. Then, if the call is not answered within 15 seconds after the ringing starts, it disconnects.</p> |
|--|--|

4. If a DISA security code is required (see the System Administrator), dial the code and listen for CO dial tone.  
  
...or if a DISA security code is not required, you hear CO dial tone.
5. Press **0** to reset the timer four more minutes; otherwise, the call disconnects approximately one min. after the tone.
6. Dial a telephone number.

If the correct code is not entered, the call is disconnected.

A timer tone plays (approximately four mins.) that both parties hear after the call was made.

# Door Phones

You can call a door phone and monitor the immediate area surrounding the door phone.

► **To call/monitor a door phone**

1. Lift the handset  
...or lift the handset  
and press **Line**.
2. Dial the door number:

- #151**
- #152**
- #153**
- #154**
- #155**
- #156**
- #157**
- #158**
- #159**
- #161**
- #162**
- #163**

You hear dial tone.

Door Phone ID	Location
1A	_____
1B	_____
1C	_____
2A	_____
2B	_____
2C	_____
3A	_____
3B	_____
3C	_____
4A	_____
4B	_____
4C	_____

► **To pick up a door phone call that is ringing another station**

1. When you hear a door phone call, lift the handset  
...or lift the handset  
and press **Line**.
2. Press **#5#30**.

Door phone calls ring from one to five times, depending on system programming.



## DTMF Tone Dialing with \* and #

You may have to send \* and # DTMF tones to some devices or services, such as a voice mail device or computer output service. See your System Administrator to find out whether the \* button on your telephone has been programmed for DTMF tones or as a Speed Dial button.

- While on an outside call, press \*, then #.

You can now output \* and #, DTMF tones, and digits **0~9** for the duration of the call. This procedure must be repeated on each call where you require such output.

## Hold

With the **Line** button, you can place a call on hold or exclusive hold for retrieval at a later time.

**Note** The **Conf/Trn** button also places calls on hold (see [“Conference Calls” on Page 24](#)) and the feature [“Call Park Orbits” on Page 20](#)).

- While on a call, press **Hold** once to hold internal or outside calls

...or press twice to enable Exclusive Hold. The Line LED flashes at the exclusive hold rate.

The Line LED flashes at the internal hold rate.

**Note** Exclusive Hold enables you to place a call on hold so that only you or somebody using a Call Pickup code at another station can retrieve it.

## Retrieve a Call on Hold

- Press **Line** again.

If a call is not retrieved by a certain time (set in system programming), it recalls back to your phone. You hear repeated recall tone (or if you are on the phone, you hear recall tone twice).

If the held party hangs up, the call is released and the CO provides a hold-release signal.

## Retrieve a Call on Exclusive Hold

- Press **Line** again.

If a call is not retrieved by a certain time (set in system programming), it recalls back to your phone. You hear repeated recall tone (or if you are on the phone, you hear recall tone twice).

If the held party hangs up, the call is released and the CO provides a hold-release signal.

## Message Waiting

If your station is idle or busy on a call while another station tries to contact you, the calling station can turn on the message waiting LED on your telephone. Your Message Waiting lamp flashes when there is a message.

When you respond by pressing **Msg**, you will either hear a voice message or your phone will dial the telephone which set a callback message. Voice mail devices and stations can leave message waiting indications.

Up to four Message Waiting indications can be left at a station at one time. One of the indications is for the Message Center.

► **To answer a Message Waiting light**

1. Lift the handset and press **Msg.**  
...or lift the handset and press **Line** + **#408.**

You hear dial tone after lifting the handset.

Your phone rings the device that set the indication. If there is no answer, hang up and try later. (The LED continues to flash.)

2. If your telephone calls a busy station or there is no answer, hang up and try later.

The LED continues to flash.

...or you can bypass this message and listen to the next message by going on-hook and repeating Steps 1 and 2.

This feature is available for DK14, DK16e, DK16, DK40i, DK40, DK280 Release 3.1 and higher, DK424 Release 1 and DK424i.

3. After receiving the message, hang up.

If the Message Waiting lamp continues to flash, you have more messages.

- Repeat Steps 1~3 to retrieve them.

► **To cancel the Message Waiting light**

1. Lift the handset  
...or lift the handset and press **Line.**

You hear dial tone.

2. Press **#409**

The Message Waiting indication is cancelled.

## Set Message Waiting on Other Telephones

After reaching a busy or unanswered telephone equipped with a Message Waiting indicator, you can set a Message Waiting indication on the called telephone. A flashing lamp or LED at the called telephone indicates a call is waiting. The station user can press the button with the flashing LED or enter **#408** to call you back.

- |   |   |
|---|---|
| <ol style="list-style-type: none"><li>3. If a called telephone station is busy or does not answer, press <b>Msg</b><br/>...or press <b>7</b>.</li><li>4. Hang up.</li></ol> | <p>A Message Waiting light is set at the station. If you are calling a standard telephone, the telephone must have a message waiting light. All Toshiba digital or electronic telephones, as well as the DKT2001 telephones, have Message Waiting lights.</p> |
|---|---|

### ► To cancel the Message Waiting indication on another telephone

- |  |  |
|--|--|
| <ol style="list-style-type: none"><li>1. Lift the handset<br/>...or lift the handset and press <b>Line</b>.</li><li>2. Dial the station.</li><li>3. Press <b>Msg</b> twice<br/>...or press <b>#64 + XXX</b>.<br/>(<b>XXX</b> = station number with the message light.)</li></ol> | <p>You hear dial tone.</p> <p>You hear busy tone if the called station is busy, or you hear repetitive ringing or a single tone if the called station is idle.</p> <p>The Message Waiting indication on the station is turned OFF.</p> |
|--|--|

## Override Calls

Busy Override enables you to send a tone to a busy station to indicate that a call is waiting. Any station can initiate Busy Override. Off-hook Call Announce is another way to contact a busy station; it lets you speak to a digital telephone user who is off-hook.

Do Not Disturb (DND) Override lets you send a tone to an idle station in the DND mode to indicate that a call is coming in. Executive Override enables you to enter a conversation. Executive Override and DND Override must be enabled in system programming to function.

### Busy Override or Off-hook Call Announce

- |  |  |
|--|--|
| <p>➤ After reaching a busy station, press <b>2</b></p> <p>...or to OCA, dial <b>21</b> or <b>12</b>.</p> | <p>The busy station receives a tone signal, indicating a waiting call.</p> <p>If the busy station has the Off-hook Call Announce (OCA) feature, then you can immediately talk to the called party.</p> |
|--|--|

### Do Not Disturb (DND) Override

- |  |   |
|--|---|
| <p>➤ After reaching a station in DND mode, press <b>2</b>.</p> | <p>The DND station receives a fast, busy tone signal, indicating that a call is coming in.</p> <p><b>Note</b> Your station must be programmed for this feature.</p> |
|--|---|

### Executive Override

- |   |  |
|---|--|
| <p>➤ After reaching a busy station, press <b>3</b>.</p> | <p>You can now enter the conversation. An optional tone signal can be heard by the called parties prior to your entrance.</p> <p><b>Note</b> Your station must be programmed for this feature.</p> |
|---|--|

## Toll Restriction Override

Stations can be individually restricted from making toll calls. Each station can be allowed or denied specific area and office codes, long distance information calls, international calls and/or operator-assisted calls.

You can completely override Toll Restriction at selected stations or you can change the station's Toll Restriction class. The station resumes its normal class at the conclusion of the call.

---

1. Access a CO line.	You hear dial tone and the LED flashes at the in-use rate.
2. Press <b>Cnf/Trn +#47</b> .	You no longer hear dial tone.
3. Enter the Toll Restriction Override Code (four digits).	You hear dial tone. For security reasons, the override codes are only available on a selected basis. See your System Administrator.
4. Dial a telephone number.	

## Paging Announcements

You can make page announcements to digital and electronic telephone speakers and external speakers. Telephones are assigned to specific page groups in system programming. A page can be sent to external speakers (all zones), if enabled in system programming.

---

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear dial tone.
2. Enter a page access code.	See <a href="#">Table 5 on Page 47</a> .

3. Make your announcement in a normal voice level and then repeat the announcement.
4. Hang up when you have completed your announcement.

## Repeat Last Number Dialed

This feature enables you to easily redial the last number called.

See your System Administrator if this feature doesn't work. The **#** button on your telephone may have been programmed for DTMF tones, rather than Speed Dial.

- 
- |  |  |
|--|--|
| 1. Lift the handset<br>...or lift the handset<br>and press <b>Line</b> . | You hear dial tone.  |
| 2. Press <b>##</b> .   | The system automatically dials the last telephone number that you entered. |

# Speed Dial

Speed Dial enables you to call a telephone number by dialing a brief access code, instead of having to dial the entire telephone number. There are two types of Speed Dial numbers: Station Speed Dial numbers, which you can assign to Speed Dial locations and System Speed Dial numbers, which are assigned from the System Administrator's station or an attendant console, but they can be used by other stations.

See your System Administrator if this feature doesn't work. The \* button on your telephone may have been programmed for DTMF tones, rather than Speed Dial.

## ► To store a station speed dial number

<p>1. Lift the handset ...or lift the handset and press <b>Line</b>.</p>	<p>You hear dial tone.</p>
<p>2. Press <b>#66</b>.</p>	<p>You hear a short tone.</p>
<p>3. Press <b># *</b>.</p>	
<p>4. Enter the access code where you wish to store the telephone number.</p>	<p>See <a href="#">Table 7 on Page 48</a>.</p>
<p>5. Dial the CO line number access code to be stored.</p>	<p>See <a href="#">Table 4 on Page 46</a>.</p>
<p>6. Enter the telephone number.</p>	<p>The number can be up to 20 digits, including the CO line access code.</p>
<p>7. Press <b>#</b>.</p>	<p>You hear confirmation tone once the CO line access code and the telephone number are stored. They will be automatically dialed when you enter the Speed Dial access code.</p> <p>Repeat this procedure to replace the stored telephone number with a new one.</p>



► **To speed dial call**

<ol style="list-style-type: none"> <li>1. Lift the handset ...or lift the handset and press <b>Line</b>.</li> <li>2. Press <b># *</b>.</li> <li>3. Dial a Speed Dial access code.</li> </ol>	<p>You hear dial tone.</p> <p>Dial tone continues.</p> <p>Dial tone continues while you enter the access code. See <a href="#">Table 7 on Page 48</a>. The system automatically dials the telephone number assigned to this code.</p>
--	---

## Timed Reminders

You can set five separate reminders at your station. At the time (hour and minute) set by you, your telephone beeps. You can set the reminder to occur once or on a daily basis.

<ol style="list-style-type: none"> <li>1. Lift the handset ...or lift the handset and press <b>Line</b>.</li> <li>2. Dial a timed reminder number (<b>#605~#609</b>).</li> <li>3. Enter the time you want to be reminded.</li> <li>4. Press <b>0</b> for the reminder to be repeated every day, or <b>1</b> for a one-time reminder only.</li> <li>5. Enter <b>00</b>.</li> </ol>	<p>You hear dial tone.</p> <p>Use a 24-hour clock format (HHMM).</p> <p>The time is recorded in memory and you should hear a beeping tone (along with the displayed message) for 30 seconds at the set time.</p>
---	--

## Features

### *Timed Reminders*

6. Press **#**.
7. To cancel the beeping/message prior to 30 seconds, take the phone off-hook.

#### ► **To cancel a Timed Reminder**

1. Press [DN], then the number of the timed reminder (**#605~#609**) you want to cancel.
2. Press **#**.

You can only cancel one reminder at a time.

The reminder is cancelled.

This chapter explains how to program your telephone for Call Forward and message retrieval when using a Toshiba Voice Mail System with your Strata DK system.

Refer to the appropriate Toshiba Voice Mail user guide for more information:

- ♦ *Stratagy Voice Processing User Guide*
- ♦ *Toshiba VP User Guide*

## Setting Call Forward

You can program your telephone to forward to the Toshiba Voice Mail System to answer your calls when you are busy or not available.

## Voice Mail Identification Code

To direct forwarded calls to your mailbox—your personal storage space for voice messages—and to ensure that callers receive your personal greeting, you must store a Voice Mail (VM) Identification (ID) code once for your telephone Intercom Number.

➤ **To store the voice mail ID code**

---

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear dial tone.
2. Press <b>#656</b> .	You hear confirmation tone. <b>#656</b> is the access code for setting the Voice Mail Call Forward digit sequence. This code does not forward calls to the Voice Mail system.
3. Press <b>91</b> .	
4. Enter your mailbox number.	This could be the mailbox number for your Directory Number.
5. Press <b>#</b> .	You hear confirmation tone. The VM ID code is automatically sent to the Voice Mail system whenever calls to your telephone are forwarded to it.

**Note** Steps 1~5 are required for the initial storage of VM ID code to the Toshiba Voice Mail system. Once programmed, these digits remain in memory until changed. Repeat Steps 1~5 to change the code.

➤ **To cancel the voice mail ID code**

---

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear dial tone.
2. Press <b>#656</b> .	You hear confirmation tone.
3. Press <b>#</b> .	You hear confirmation tone. The ID code is cancelled.

## Call Forward To Toshiba Voice Systems

By setting Call Forward to the Toshiba Voice Mail System on your telephone, information about the call will automatically be sent to the Voice Mail system, so that the callers who call your telephone and call forward to voice mail will be automatically connected to your voice mail box.

## Voice Mail Message Retrieval

You can program your telephone to automatically retrieve your voice mail messages.

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear dial tone.
2. Press <b>#657</b> .	You hear confirmation tone. <b>#657</b> is the access code for setting the Voice Mail message retrieval digit sequence. This code does not forward calls to the Toshiba Voice Mail system.
3. Press <b>92</b> .	
4. Enter your mailbox number plus your security code.	By storing your security code, you avoid having to enter your code every time you access your mailbox; however, this will also enable anyone to retrieve your messages from your phone. If a security code is not desired, do not include it.
5. Press <b>#</b> .	You hear confirmation tone.

### ► To cancel the voice mail retrieval codes

1. Lift the handset ...or lift the handset and press <b>Line</b> .	You hear dial tone.
2. Press <b>#657</b> .	You hear confirmation tone.
3. Press <b>#</b> .	You hear confirmation tone. The retrieval code is cancelled.

### ► To retrieve messages

1. When the Msg Lamp flashes, lift the handset.
2. Press **Msg**  
...or press **Line**, then **Msg**  
...or press **#408**  
...or press **Line** + **#408**.

The Voice Mail System is called and you are automatically connected to your Voice Mail box.

If you have multiple messages from other telephones, go on-hook and then repeat this step to skip the next message.

**Note** Your phone must be programmed to retrieve messages per the previous steps.

This appendix contains access codes for outside Speed Dial numbers, CO lines, Paging Group and Paging Zone Codes.

## CO Line Access Codes

Your system may require that you enter a CO line code when you make an outside call. The codes are listed in [Table 4](#). See your System Administrator for the code that applies to your telephone.

### ► To access a line

- 
1. Lift the handset  
...or lift the handset  
and press **Line**.
  2. Enter a CO Line  
Access Code (see  
[Table 4](#)).

**Table 4 CO Line Access Codes**

System	CO Line Access Codes
DK14	<b>9</b> or <b>801~804</b> or <b>#7001~#7004</b>
DK16e and 16	<b>9</b> or <b>801~808</b> or <b>#7001~#7008</b>
DK40i and DK40	<b>9</b> or <b>801~808</b> or <b>#7001~#7012</b>
DK424 (RCTUA)	<b>9</b> or <b>801~808</b> or <b>#7001~#7016</b>
DK424 (RCTUBA/BB) and DK424i (B1CAU)	<b>9</b> or <b>801~808</b> or <b>#7001~#7048</b>
DK424 (RCTUC/D) and DK424i (B2CAU/B2CBU) (B3CAU/B3CBU)	<b>9</b> or <b>801~816</b> or <b>#7001~#7144</b>
DK424 (RCTUE/F) and DK424i (B5CAU/B5CBU)	<b>9</b> or <b>801~816</b> or <b>#7001~#7200</b>

**Notes**

- In some systems, **9** accesses a general group code, an outside line, or Least Cost Routing (LCR). System users are required to dial **9** in order to access an outside line. If you press **9** in a system programmed with LCR, you may not hear internal dial tone, depending on system programming.
- **801~816** accesses line groups 1~16, respectively.
- **#7001~#7200** accesses individual lines 1~200, respectively.



# Paging Access Codes

Your telephone can be assigned to page group(s). Telephones can be a member of more than one group and each group can have as many as 120 stations. Station users can access each group separately by dialing an access code (Tables 5~6).

- **To enter a paging group access code**
  - Access a line, then enter an Access Code.

**Table 5**      **Paging Groups**

Paging Group	Access Code	Paging Group	Access Code
Station Group A	<b>#311</b>	Station Group E	<b>#315</b>
Station Group B	<b>#312</b>	Station Group F	<b>#316</b>
Station Group C	<b>#313</b>	Station Group G	<b>#317</b>
Station Group D	<b>#314</b>	Station Group H	<b>#318</b>

**Note** If you are storing onto a Speed Dial code, enter **44** in place of #.

**Table 6**      **External Paging Zones**

External Paging Zone	Access Code	External Paging Zone	Access Code
<b>DK14/DK40i/DK40/DK424/DK424i (all processors)</b>			
Paging All Call Page Zone	<b>#30</b>	Paging All Call, External Page Zone	<b>#39</b>
<b>DK40i/DK40/DK424 (RCTUA, RCTUBA/BB, RCTUC/D) and DK424i (B1CAU, B2CAU/B2CBU, B3CAU/B3CBU)</b>			
Zone A	<b>#35</b>	Zone C	<b>#37</b>
Zone B	<b>#36</b>	Zone D	<b>#38</b>
<b>DK424 (RCTUE/F) and DK424i (B5CAU/B5CBU)</b>			
Zone A	<b>#351</b>	Zone E	<b>#355</b>
Zone B	<b>#352</b>	Zone F	<b>#356</b>
Zone C	<b>#353</b>	Zone G	<b>#357</b>
Zone D	<b>#354</b>	Zone H	<b>#358</b>

## Speed Dial Access Codes

The number of station and system speed dial numbers available to you depends on the size of your company's telephone system. Check with your System Administrator to find out which codes apply to your system.

Once you store a telephone number on any of the codes listed below, you can dial the number by entering the code, such as **\*10** (see [Table 7](#).)

**Table 7      Speed Dial Access Codes**

Telephone System Size	Station Speed Dial Codes	System Speed Dial Codes
Small System (DK14/DK16e/DK16/DK40i/DK40/RCTUA)	<b>10~49</b>	<b>60~99</b>
Medium System RCTUBA/BB, RCTUC/D, B1CAU, B2CAU/B2CBU and B3CAU/B3CBU	<b>10~49</b>	<b>600~699</b>
Large System RCTUE/F and B5CAU/B5CBU	<b>100~139</b>	<b>200~999</b>

# Centrex Application

---

# B

Your system may be equipped with the Centrex Application, which enhances its feature capability when installed behind a Centrex or PBX system. Your telephone may have access to one or more of the enhanced Centrex features listed below.

## Flexible Directory Numbering

A station's [PDN] can be three or four digits. It is, therefore, possible to match a station's [PDN] and Centrex line extension number. Dial the entire station number when indicated.

**Note** Some access code numbers may have been changed to avoid system numbering plan conflicts.

## Centrex Feature Buttons

You can access some Centrex features by dialing a Centrex access code. You may also need to enter codes for a necessary flash and/or pause sequence. See your Centrex or PBX operations manual for specific details.

## **Ringling Repeat**

The distinctive ring patterns available in your Centrex system are automatically repeated with your digital telephone, enabling you to answer appropriately for either outside, inside or callback calls.

## **Delayed Ringling**

CO or Centrex line(s) can be programmed for a 12-second and/or 24-second ring delay at stations to permit alternate answering conditions. Answer the line when your telephone is ringing.

# Index

---

## A

ABR, [11](#)  
ACB, [13](#)  
access codes, [45](#)  
    speed dial, [48](#)  
account code calls, [9](#)  
ACD, [12](#)  
answering, [7, 8](#)  
attendant console calling, [12](#)  
automatic busy redial, [11](#)  
automatic call distribution (see ACD)  
automatic callback, [12](#)  
automatic callback (see ACB), [13](#)

## B

background music (see BGM)  
before you begin, [5](#)  
BGM over telephone speakers, [15](#)  
busy override, [35](#)  
buttons, [2](#)  
    **Cnf/Trn**, [2](#)  
    **Hold**, [2](#)  
    **Line**, [2](#)  
    **Msg**, [2](#)  
    volume control, [2](#)

## C

call  
    hold, [2, 20, 31](#)  
    park orbits, [20](#)  
    pickup, [22](#)  
call forward, [15](#)  
    external, [17](#)  
    to voice mail, [41](#)  
calling  
    internally, [7](#)  
    outside, [7](#)  
centrex  
    application, [49](#)  
    feature buttons, [49](#)  
**Cnf/Trn**, [2](#)  
CO line  
    access codes, [45](#)  
    queuing, [26](#)  
conference calls, [27](#)

## D

delayed ringing, [50](#)  
direct inward system access (DISA), [27](#)  
DND, [13](#)  
DND override, [35](#)  
door phones, [30](#)

**E**

emergency  
    call to a console, 14  
    override of forced account code, 9  
exclusive hold, 31, 32  
executive override, 35  
external paging zones, 47

**F**

flash a CO line, 6  
flexible directory numbering, 49  
forced account codes, 9

**H**

**Hold**, 2  
hold, 20, 31, 32

**I**

integrated services digital networking  
(ISDN), 8

**L**

LED indicators, 3  
**Line**, 2

**M**

message waiting, 32  
    other telephones, 34

**Msg**, 2

**O**

OCA, 35  
off-hook, 4  
off-hook call announce (see OCA)

on-hook, 4  
override, 35  
    busy, DND, executive, 35  
    toll restriction, 36

**P**

paging group codes, 47  
Park, 20  
park and page, 21  
park orbits, 20  
pickup, 22

**R**

repeat last number dialed, 37  
ringing  
    patterns, 6  
    repeat, 50

**S**

SLT, v  
speed dial, 38, 48

**T**

timed reminders, 39  
toll restriction override, 36  
tone/voice first signaling, 41  
transfer calls, 2, 20, 21

**V**

verified account codes, 10  
voice mail, 41  
    message retrieval, 43  
volume, 2  
    controls, 4  
voluntary account codes, 10